

# Installation Manual

**warmset** <sup>®</sup>  
LAMINATED HEATING TECHNOLOGY

---

# Floor heating system



**Video Installation  
Guide**

Read this manual before attempting to install the Warmset system. Incorrect installation may damage it, voiding the warranty.

**warmset** <sup>®</sup>  
LAMINATED HEATING TECHNOLOGY

---

Via Ettore Majorana 1  
36075 Montecchio Maggiore / Vicenza — Italy  
T +39 0444 212511

---

[www.warmset.com](http://www.warmset.com)

# General instructions before starting!!



The device can be used by children elder than 8 years, by persons with reduced physical, mental and sensitive capabilities and/or lack of knowledge and experience, only under proper supervision or if they have been trained on the safe use of the appliance and the relative risks.



Children should not play with the appliance.



Cleaning and maintenance must not be carried out by children without supervision.



Always install the heating unit away from other heat sources such as lighting fixtures and chimneys.



Avoid, while laying down the product, the build-up of air pockets in the stratigraphy, optimizing the compactness and proper filling of the screed, as well as the contact between the various layers in case of dry-laying; you should perform the installation on a surface as flat and smooth as possible.



Leave as little time as possible between the laying down of the heating element and the covering of the same, avoiding to drop or leave any sharp metal object on it, stepping as little as possible, only if strictly necessary and with the due attention.



Regardless of the coverage choice, it is important to remember that furniture and furnishings that for some reason happen to be over heated areas must have a lower open space of at least 5 cm. Otherwise you might run into overheating and consequent damage of the heating element and floor.



The heating units must be installed through a differential device with rated operating current not exceeding 30 mA, and a multi-pole safety switch category 3, the two in accordance with the local standards.

---

Be sure to read all the technical documentation included with the thermostat. The settings for adjusting the temperature of the probe will be kept in a max-min range of 26 - 24 °C. The thermostat setting mode to be used is that of the “Room / floor limiting”.



---

Use a coverage with a maximum resistance of less than 1.5 m<sup>2</sup>K/W  
For wood floor use a maximum resistance of less than 0.17 m<sup>2</sup>K/W



---

Choose for the floor materials compatible with the temperatures that will be reached, asking for counselling the manufacturer about materials not mentioned in these instructions; the thickness of the floor must be more than 5 mm.



---

It is advisable to provide, under the heating element, a layer of insulating material with performance better than 1.5 m<sup>2</sup>K / W. For floating floor application is mandatory to install a proper insulation foam suggested by Warmset or to an official Warmset dealer.



---

The labels on the product should be attached in the log of installation manual and kept in the vicinity of the electrical control panel.



---

Always use a thermostat with floor temperature limiting mode, as OJ mod. OCS4-10-10 MCS4, OSC4/OSD4, MSC4/MSD4, OSA4-10-10 MSA4 Connect the sensors provided the thermostat. The floor sensor must be installed at about 30 cm from a wall. It is important that the floor sensor is positioned exactly halfway between two heating segments and 10 cm from the heating curves.



---

Local building codes and regulations may require all or part of the installation of this product, and/or the corresponding thermostat, to be performed by a licensed electrician. Leave this manual with the end-user.



Direct underfloor heating system

# Contents

5	<b>Product Information</b>	Attention
		Items needed
		Electrical Rough-in
		Type of floor
7	<b>Installation</b>	Mat Installation
		Quick installation guide

**Under no circumstance should the heating ribbon integrated in the mesh be damaged, pierced or held in place through the use of staples; the functionality of the floor heating system will be compromised. Only the mesh can be stapled.**

**Warning**



This instructions are available in digital format on [www.warmset.com](http://www.warmset.com)

# Attention!

## NEVER

- Never install Warmset Mat under built-ins such as cabinets or vanities or where air does not flow freely.
- Never connect the Warmset Mat to the thermostat before the installation is completed.
- Never use sharp tools or power tools to clean grout lines. Cleaning grout lines with sharp tools or power tools may damage the heating ribbon and will void the Warmset warranty.
- Never cut the heating ribbon. If the heating ribbon is cut, it can cause electric shock, dangerous over-heating, or fire. If necessary, the cold leads may be cut shorter, but never remove them completely from the heating ribbon.
- Never use metal penetrative fasteners such as nails, staples or screws to secure the heating ribbon to the sub-floor. Only the mesh can be stapled and not the heating ribbon can be stapled.
- Never try to create a larger heating mat by splicing one heating mat to another. Multiple mat cold leads must be connected in parallel.
- Never install Warmset Mats in walls or ceilings.
- Never remove any labeling from Warmset Mats. Make sure all appropriate labels are visible for inspection.

## ALWAYS

- Always install a GFCI circuit breaker with each Mat (or group of Mats connected together).
- Always use caution when working with tools when working around Warmset Mat. Be careful not to nick or cut the heating ribbon.
- Always adhere to all power limitations of the breaker, thermostat, and chosen Warmset Mat. Be sure the Voltage and Current are both appropriate for the system.
- Always install Warmset system on a adequately rated circuit.
- Always Make sure all electrical work is done by qualified persons in accordance with local electrical and building codes.
- Always use copper wiring to complete the connections in the Warmset system.
- Always seek help or clarity if problems arise. If in doubt about any installation procedures, or if the product appears to be damaged, please contact Warmset before starting the installation process.
- Always install Warmfoam or Warmduplex foam for floating floor application (find all the information on [www.warmset.com](http://www.warmset.com))

## Items needed

### Materials

- > Thermostat and floor probe sold separately
- > Appropriate available circuit breakers
- > An adequately large electrical box
- > Junction box with cover (if required)
- > Electrical Conduit (if required)
- > Adequate gauge wiring
- > Check with local building codes for any further safety requirements

---

### Tools

- > Digital multi-meter and ohmmeter
- > A knife or scissors
- > Wire strippers
- > Non-conductive builders tape
- > All necessary small hand tools (drills, screwdrivers, measuring tape, marker, shears to cut mesh substrate, etc...)

# Electrical Rough-in

**Warmset Mat heating mats must be connected to a circuit breaker to protect against circuit overload. A ground fault circuit interrupter is suggested. If there is not a GFCI built in to the chosen thermostat, one should be installed.**

The required rating of the circuit breaker can be determined by the amp draw of the given heating mats. Simply add the amp requirements from each mat in the system. If the total amps required for the circuit exceeds 15 amps, a second breaker must be used. The current draw must never exceed 15 amps per breaker. It is recommended to install Warmset Mat systems on new, dedicated breakers; however it is possible to tap into an existing breaker if there is adequate capacity available. Remember to leave excess current available for high-draw appliances. Typical hair dryers pull 1200 watts of load, and some can draw more.

Choose a location and install an electrical box for the thermostat. Use an extra deep electrical box. For installations with several mats, use an adequate box. This electrical box should be located in a well ventilated area, and placed so that the leads from the mats or junction box, can easily reach it. It must also be able to connect back to the chosen circuit breaker.


Following code, run a line from the electrical box to the circuit breaker using **2.5 mm<sup>2</sup>** type electrical wiring. Leave at least 15 centimeters of extra cable in the box.

If the electrical box is located too far from where the leads from the mats will be, or if multiple mats are being used, a junction box must be installed. Use a standard junction box and cover. Once the box is in place, run a line from the junction box to the electrical box using **2,5 mm<sup>2</sup>** electrical wiring.


## Type of floor

### Wooden Floor

- Ensure adequate ventilation of the ground under the floor;
- The existing floorboards must be firmly fixed and, if necessary, pre-fixed with self-leveling latex / cement to give a flow suitable for a subsequent application of plywood.
- In case of floating insert Warmset insulation (Warmduplex foam/Warmfoam)

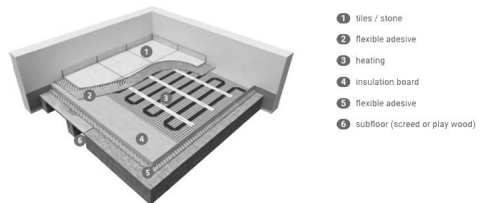


- 1 tiles / stone
- 2 flexible adhesive
- 3 heating
- 4 insulation board
- 5 flexible adhesive
- 6 subfloor (screed or play wood)

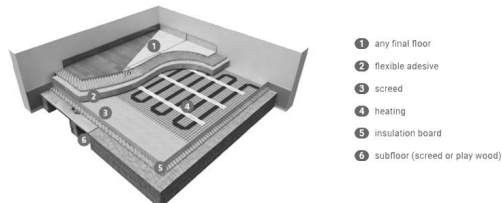

- 1 any final floor
- 2 flexible adhesive
- 3 screed
- 4 heating
- 5 insulation board
- 6 subfloor (screed or play wood)

### Ceramic Tile / Resin floors

- Make sure you use an extruded polystyrene or a suitable insulator that supports the tiles if the installation is on a cement base.

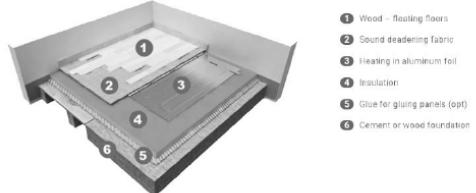

- 1 Wood - floating floors
- 2 Sound deadening fabric
- 3 Heating in aluminum foil
- 4 insulation
- 5 Glue for gluing panels (opt)
- 6 Cement or wood foundation

# Mat Installation

---

Before Warmset products can be installed, the floor must be completely swept of all debris.

Objects on the floor such as nails or other construction material can interfere with the installation and operation of Warmset Mat systems. Clean the subfloor as thoroughly as you can.

---

All Warmset Mat mats have a width of roughly 50 cm. Depending on the layout and shape of your room, creative placement of the heating mats may be required.

To facilitate working around obstacles, or unusual room shapes, the heating element may be removed from the mesh. When the heating ribbon needs to be removed from the mesh (carrier) to facilitate working around obstacles or unusual shaped rooms, the measured center-to-center spacing between runs must be maintained throughout the installation. However, in order to maintain even heat dissipation, avoid removing excessive amounts of mesh. Depending on your installation, large gaps between the mesh can exist. If you are laying large quantities of heating mats outside of the mesh, pay close attention to your spacing. **Remember that gaps larger than 7 cm can create cold spots.**

Verify that the wiring will reach the required electrical box or junction box. Never run wiring back over mats to reach these boxes.

---

Warmset Mat heating mats can be cut for any straight or right angle.


**This process is shown in the next page**

When cutting and placing mats, remember to try and space them appropriately. It is important to insure there is no overlap between installed mats. Overlapped mats can cause dangerous overheating.




**Note: It is very important to be careful when cutting the mesh. If the heating element is damaged, it can no longer be used. Do not try and repair damaged heating elements.**


# Mat Installation

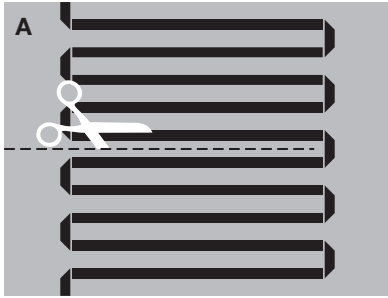



**A.** Cut the mesh on the dotted line

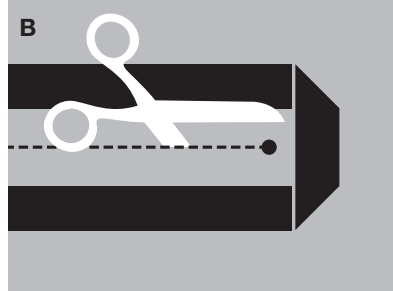

**B.** Be careful to not damage the heating element

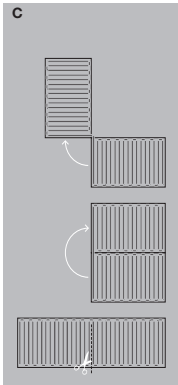

**C.** Once the mesh has been cut, the element can be unfolded to the desired angle.

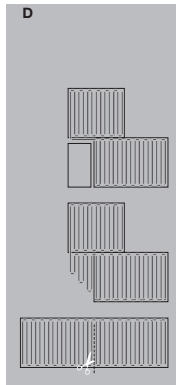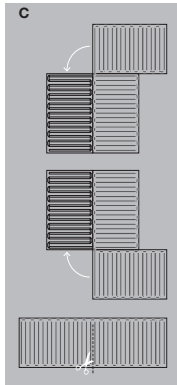

**D.** The mats can be cut for several angles, allowing the system to work around almost any obstacles.

---

Unroll the Warmset Mat mats to cover the space.

It is important to check the layout by test fitting the entire system. Confirm that there are no folds or large ripples.

---

Once the system has been fitted in place; it must be secured to the sub-floor. Warmset Mats should be secured to the floor using non-conductive, general purpose, double-sided building tape. If need be, stabilize your installation with staples or hot glue. At no time should you ever staple the heating ribbon itself. This will jeopardize the functionality of your system. Only the mesh should be stapled or glued.

---

As the mats are being secured, it is important to ensure they are being laid as flat as possible. This will help make a smooth surface for spreading mortar.

---

**Do not** completely cover the heating ribbon with tape.



# Mat Installation



Once the entire system has been fitted and secured, test the resistance of the system and note it in the label logbook.

Connect the leads from the heating mats back to the electrical box or junction box. The cold leads can be installed with or without electrical conduit (recommended for added protection) depending on code requirements. If conduit is required by code, install 1,5 (minimum) conduit from the bottom plate up to the electrical box. For multiple power leads (multiple mats) install 2 cm conduit.

Drill a 1,5 cm hole in the base plate directly below the electrical box, or if it being used, junction box. Run the line from the mats through this hole up to the junction box or electrical box.

When using multiple mats, the mats should be connected in parallel. If multiple mats are being installed, label the leads as they enter the junction box. Connect these mats to the line going from the junction box to the electrical box.

The thermostat floor sensor can be installed with or without electrical conduit (recommended for added protection) depending on code requirements. Do not place the sensor in the same conduit as the power leads to avoid possible interference. Open a separate knockout in the bottom of the thermostat box. Feed the sensor (and conduit, if used) through the knock-out, down through the cut-out in the bottom plate, and out into the floor where the heating mat will be installed.

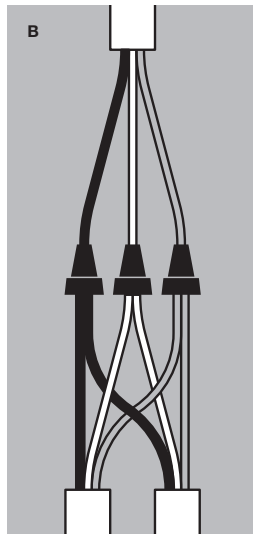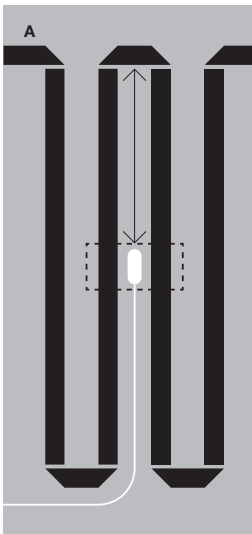

**A.**  
The thermostat floor sensor can be installed exactly between two heating elements and more than 10 cm from the plies

**B.**  
Parallel connection

**Caution**



**Never cut the heating ribbon to make it fit. Doing so will cause the system to malfunction dangerously.**

# Warranties



## Lifetime Warranty

Conditions applicable to Warmset GOLD line products.

Warmset underfloor heating is guaranteed by Warmset srl to be free from defects in materials and work-manship under normal use and maintenance, and is guaranteed to remain so subject to the limitations and conditions described below. The heating mat/ribbon GOLD line are guaranteed for the LIFETIME of the floor covering under which it is fitted, except as provided below (and your attention is drawn to the exclusions listed at the end of this guarantee).

### This lifetime guarantee applies:

1. Only if the unit is registered with Warmset within 30 days after purchase. Registration can be completed online at [www.warmset.com](http://www.warmset.com)
2. Label Logbook completed in each single part.  
In the event of a claim, proof of purchase is required, so keep your invoice and receipt - such invoice and receipt should state the exact model that has been purchased.
3. Only if the heater has been earthed and protected by a Residual Current Device (RCD) at all times.

Neither guarantee continues if the floor covering over the heater(s) is damaged, lifted, replaced, repaired or covered with subsequent layers of flooring. The guarantee period begins on the date of purchase. During the period of the guarantee Warmset will arrange for the heater to be repaired or (at its discretion) have parts replaced free of charge. The cost of the repair or replacement is your only remedy under this guarantee which does not affect your statutory rights.

Such cost does not extend to any cost other than direct cost of repair or replacement by Warmset and does not extend to costs of relaying, replacing or repairing any floor covering or floor.

If the heater fails due to damage caused during installation or tiling, this guarantee does not apply. It is therefore important to check that the heater is working (as specified in the installation manual) prior to tiling.



## 10 Years Warranty

Conditions applicable only to Warmset Black line set products.

Warmset srl guarantees that, under normal conditions of use and maintenance, Warmset underfloor heating elements have no manufacturing material defects and, subject to the restrictions and conditions described below, they will remain so. The mat / heating ribbon of the line are guaranteed for the floor covering under which they are installed, with the exception of what is reported below (please pay attention to the excluded cases indicated at the end of this Warranty).

### This 10 Years warranty is valid only if all the following conditions are met:

1. The unit is registered with Warmset within 30 days of purchase. Registration can be done online at [www.warmset.com](http://www.warmset.com).
2. The label booklet has been completed in every single part. To file a complaint, proof of purchase must be presented. Therefore, it is advisable to keep invoice and receipt. The exact model purchased must be indicated on the invoice / receipt.
3. The heating element was grounded and remained protected by a residual current device all the time.

If the floor covering laid on the heating element (or heating elements) is damaged, raised, replaced, repaired or covered with other layers of flooring, no guarantee will be applied. The warranty period starts from the date of purchase. During the warranty period, Warmset will repair or - at its discretion - replace the components free of charge. Under this warranty, the only remedy available to the customer that has no effect on his legal rights is the cost of repair or replacement.

This cost is limited to the direct cost of repair or replacement by Warmset and does not include the costs of laying, replacing or repairing any flooring or floor covering.


No warranty is applicable if the heating element does not work due to damage occurring during installation or flooring. Therefore, before proceeding with the flooring, it is important to check the functioning of the heating element, as indicated in the installation manual.





**1**

**Plan:**  
Layout Installation to determine desired mat size.

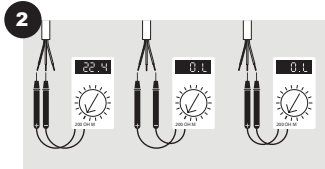


**2**

**Test & Record: (1st Time)**  
Test the mat Resistance & Insulation prior to installation. Record information from test and label on wire to lable logbook putting the tag you can find in the box.




**3**

**Dry Fit Mat:**  
Make any necessary cuts on the mesh to respect the layout project defined in point 1. Properly adhere mesh to subfloor with double-sided tape or hot glue.  
**DO NOT DAMAGE OR CUT HEATING RIBBON.**  
Take picture of installation.

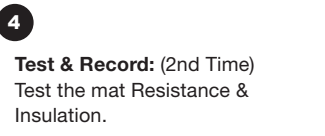


**Test & Record: (2nd Time)**  
Test the mat Resistance & Insulation.

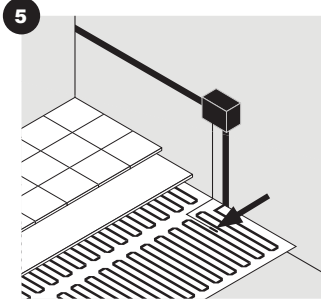

**5**

**Prepare for Electrical Connections:**  
Be sure to install Thermostat sensor according to the instruction written in the manual.

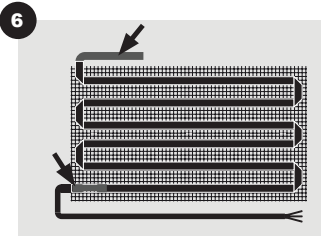

**6**


 
**Set Mat in Mortar:**  
Be sure to fully embed the mat into the thinset or self-leveling compound without damages.  
**MUST NOT PUT SPLICE AND FACTORY TAIL CONNECTIONS INSIDE THE CONDUIT.**

**For floating floors:**

Make sure to make a hollow on the subfloor/insulated board underneath the factory tail and head.



**Insert the factory tail inside the hollow.**

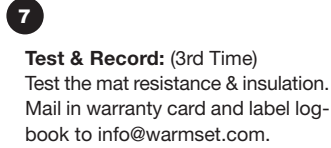

**7**

**Test & Record: (3rd Time)**  
Test the mat resistance & insulation. Mail in warranty card and label logbook to info@warmset.com.



**8**

**Tile and Grout Floor.**



**9**

**Switching system:**  
Switch on the mats after a qualified licensed electrician made electrical connections, making sure to follow instructions and installation times of slab/flooring.

**For floating floors:**  
For floating floor application is mandatory to install a proper insulation foam provided by Warmset (Warmduplex Foam/ Warmfoam)

**If you notice damage to the ribbon prior to installation or values different from what declared, DO NOT INSTALL, call your reseller or Warmset at (+39) 0444 212511.**