

# TECHNICAL DATA SHEET WTR-8000 Wi-Fi THERMOSTAT



## Index

Proc	luct	de	etai	II <u>S</u>	1
------	------	----	------	-------------	---



# **WTR-8000 Wi-Fi THERMOSTAT**

The WTR-8000 War set Wi i ther ostat is speciall desi ned for floor heatin s ste re ote control and allows accurate te perature re ulation for si nificant ener savin s.

The si ple line ake it an object that is well coordinated with odern and desi n ho e furnishin s. t is possibile to control the ther ostat b an eas app for s artphone. t also adds other convenient features such as holida ode, E O or antifreeze.

Two colors are avaible, white and black.





SUPPLY	230VAC (120VAC OPT O A )
SENSORS	1 T PROBE
ОИТРИТ	1 X SWITCH RELAY(R1)
LOAD CAPACITY	MAX 16A
ROOM TEMPERATURE	-5 °C ~ +45 °C
HUMIDITY RH	0~95%
ACCURACY	+/- 1 °C FOR +20 °C
DIMENSION	120x80x20 mm (L X H X P) - Horizontal
BACKLIGHT DURATION	5,000 Hours
BATTERY TYPE	CR 1220 (Just for clock backup)
BATTERY DURATION	> 5 YEARS
PROTECTION RATING	IP30




# **WTR-8000 Wi-Fi THERMOSTAT**

### **SIZES**

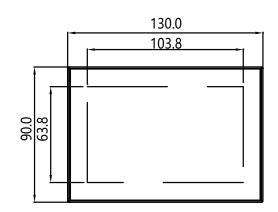

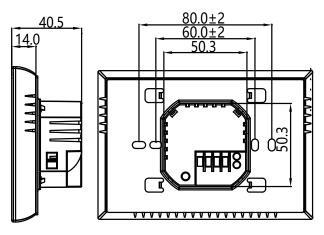

### **CONNECTION**

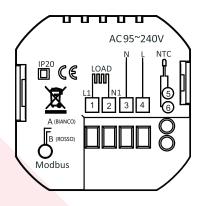

### **APP TO MANAGE THE THERMOSTAT**

The APP with which it is possible to manage the thermostat can be downloaded from AppleStore or GooglePlay by following the QR codes shown below

 






IOS

### **INSTALLATION**



Step 3. Connect power, load into appropriate terminals (see "Wiring" for details and Fig 3). Step 4. Fix the mounting plate to the wall with screws.



Step 5. Fix the thermostat body and mounting plate by twisting. See figure 5. Step 6. Installation complete. See figure 6.

